

IATA INFLIGHT BROADCAST PROCEDURE IFBP

- maintain listening watch from 10 min before entering until leaving airspace
- after departure from an aerodrome within designated airspace, listening watch shall start as soon as practicable and be maintained until leaving the airspace
- **offset 1R / A2000 / 121.500 / traffic info on 126.900**

all stations SWR264 FL370 southbound from ZRH to LOS on UG855 BOD at 1408 / estimate HOGAR at 1425 SWR264 FL370 southbound

- additional reporting:
 - 10 min before entering airspace or asap after DEP
 - 5 min before crossing a reporting point
 - 5 min before crossing or joining an ATS route
 - 2 to 5 min before a FL change
 - at the time of FL change + DISPLAY LIGHTS
 - every 20 min between distant reporting points
 - at PIC's discretion

Airport / APPs+RWYs (length) ILS/VOR/ND/B/CIR/X no APP

DAAG	Alger	109 (3.5)	I23(3.5)
DAAT	Tamanrasset	108 (3.1)	V02(3.6)
DABC	Constantine	132 (2.4)	V34(3.0)
DAUG	Ghardaia	130 (3.1)	C12(3.1)
DAUI	In Salah	V05 (3.0)	C23(3.0)
DAUZ	Zarzaitine	V23 (3.0)	C15(2.2)
DBBB	Cotonou	124 (2.4)	V06(2.3)
DNAA	Abuja	122 (3.6)	I04(3.6)
DNKN	Kano	106 (3.3)	V23(2.6)
DRRN	Niamey	109 (3.0)	V27(3.0)
DTMB	Monastir	107 (2.9)	V25(2.9)
DTTA	Tunis	119 (3.2)	I29(2.6)
DTTJ	Djerba	109 (3.1)	V27(3.1)
DXXX	Lome	122 (3.0)	V04(3.0)
FTTJ	N'Djamena	105 (2.8)	V23(2.8)
HAAB	Addis Ababa	I25R (3.3)	C07R(3.4)
HEBA	Alexandria	132 (3.4)	X14(3.4)
HELX	Luxor	120 (3.0)	V02(3.0)
HESN	Aswan	135 (3.4)	V17(3.4)
HLKF	Kufra	V02 (3.6)	V20(3.6)
HLLB	Benghazi	V15L (3.6)	V33R(3.6)
HLLS	Sebha	113 (3.6)	V31(3.6)
HLLT	Tripoli	I27 (3.6)	C36(2.6)
HRYR	Kigali	I28 (3.3)	X10(3.4)
HSOB	El Obeid	V01 (3.0)	V19(2.5)
HSSJ	Juba	V13 (2.4)	V31(2.4)
HSSS	Khartoum	I18 (2.9)	I36(2.9)
HUEN	Entebbe	I17 (3.6)	V35(3.6)

ITCZ - Position


- clouds 6'000-50'000ft
- isol CBs > FL330

COM FAILURE EUR Region (IMC):

- maintain the last assigned speed and level (or minimum flight altitude w.r.t.) for a period of **7 min** (radar controlled)
- **20 min** (not radar controlled)
- set transponder: **A7600**
- then adjust level and speed acc. flight plan

Inset Map: KANO, LAGOS, BRAZZAVILLE

- UA604** KANO
- UG857** BRAZZAVILLE
- LAGOS** Douala 125.100 / 119.700
- LAGOS** Yaounde 121.300 / 119.100
- LAGOS** Malabo 128.300
- LAGOS** Kinshasa 5493 / 8903 / 118.100 / 119.700 / 13294
- LAGOS** Entebbe 128.500 / 119.100A
- LAGOS** Nairobi 121.300 / 122.300 / 118.500 / 11300
- LAGOS** Malabo 128.300
- LAGOS** Tunis 132.550 / 129.300
- LAGOS** Malta 130.975 / 118.975

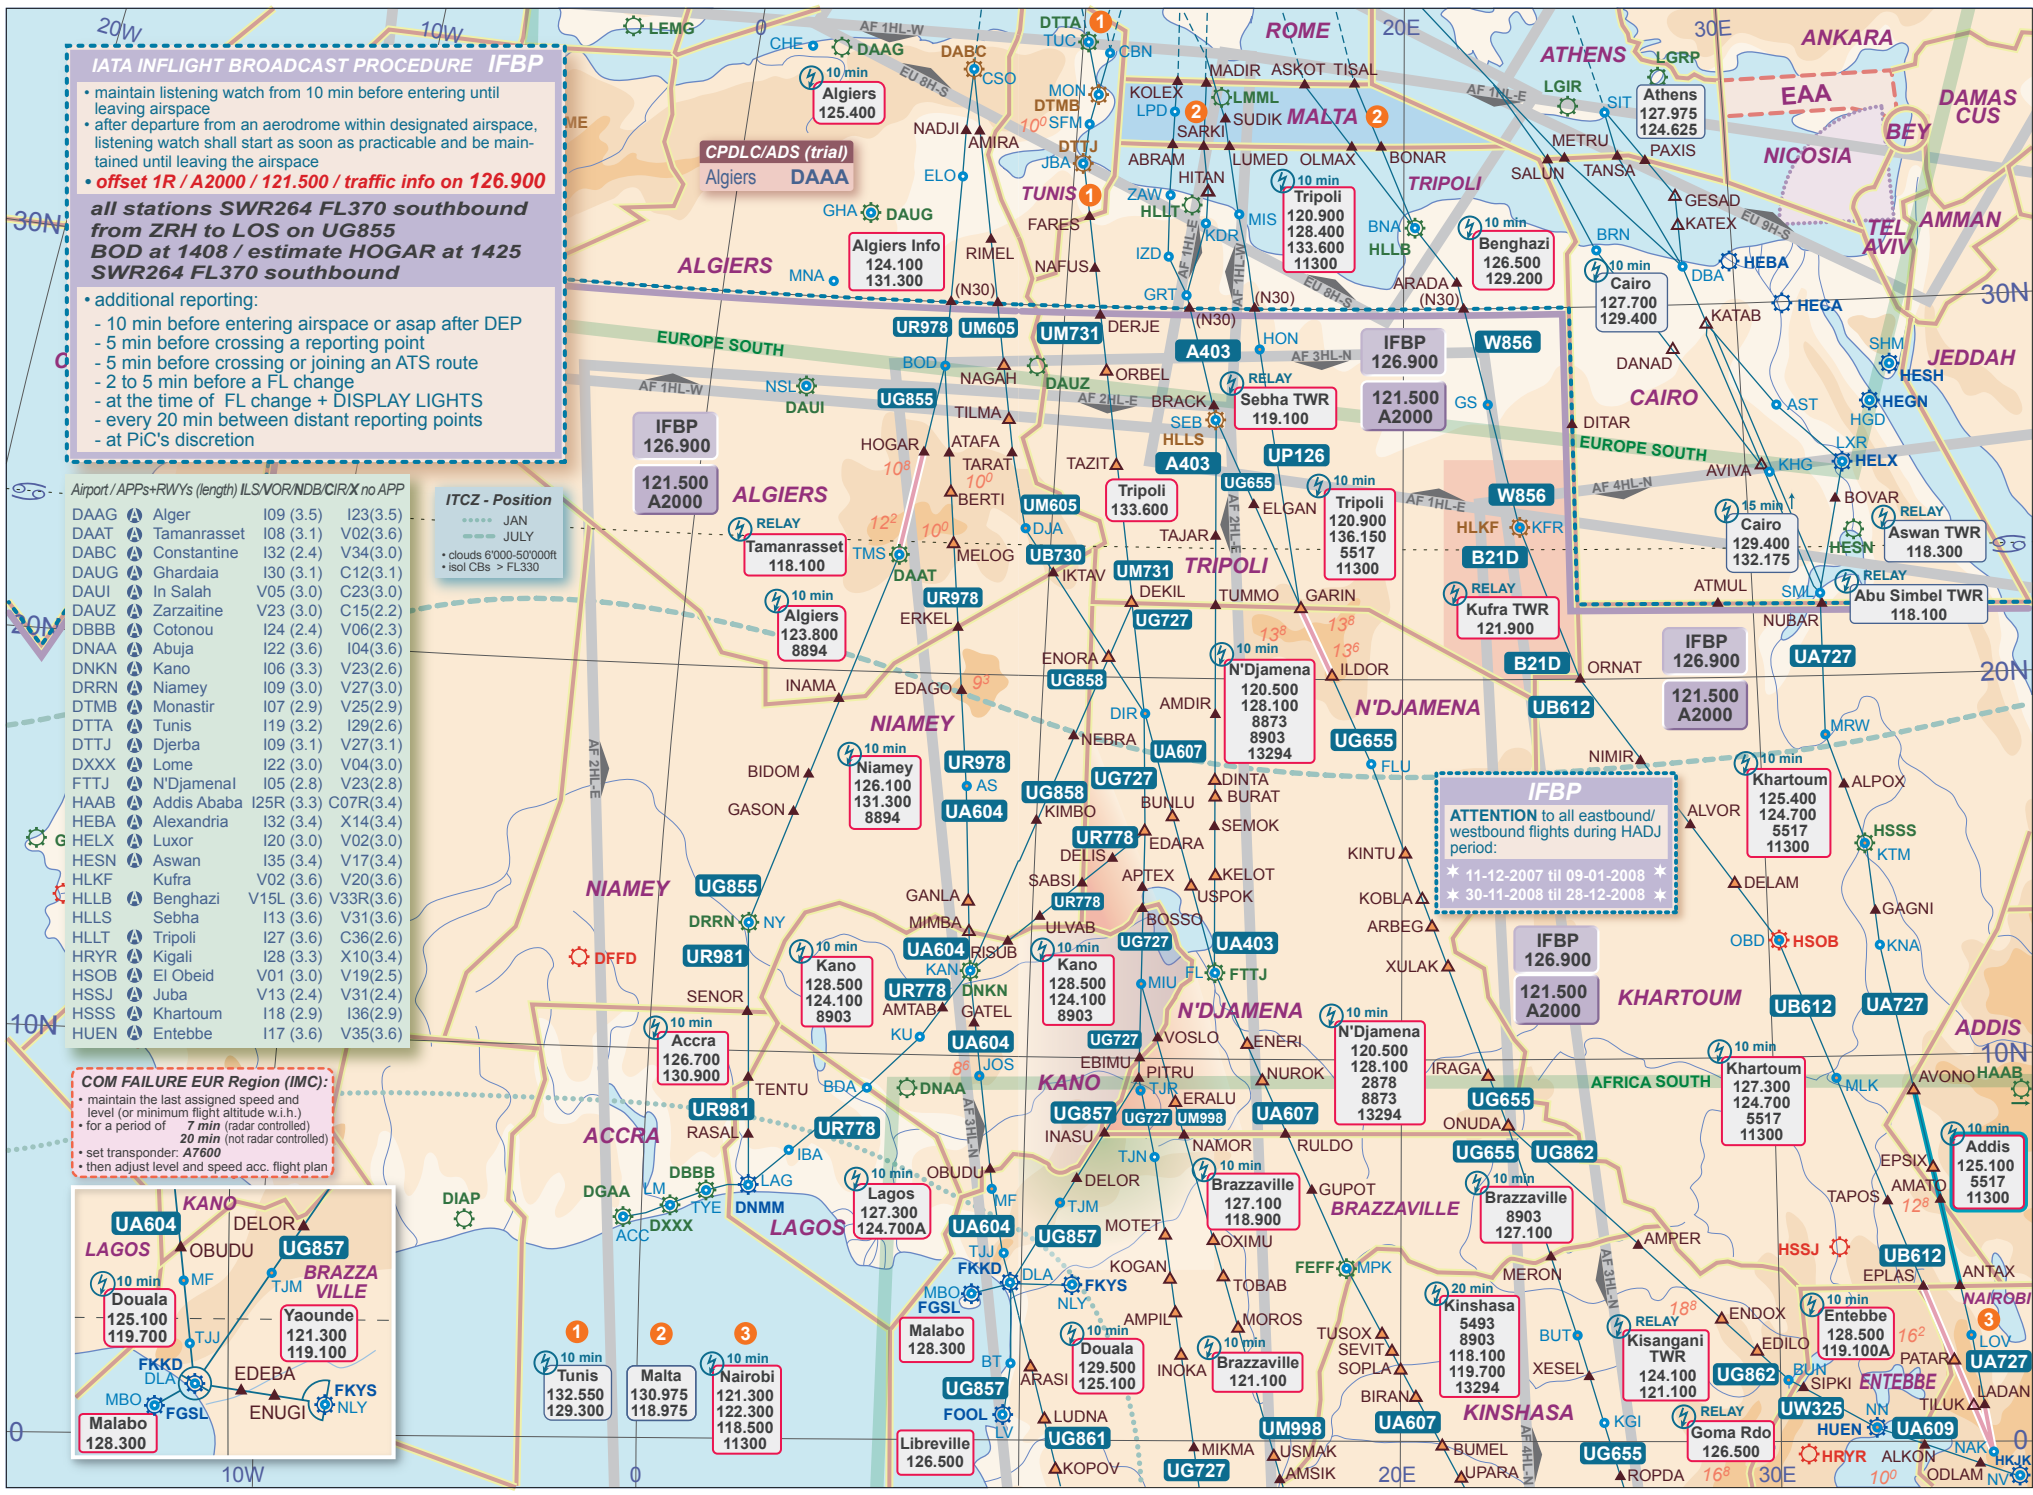

IFBP ATTENTION to all eastbound/westbound flights during HADJ period:

- * 11-12-2007 til 09-01-2008 *
- * 30-11-2008 til 28-12-2008 *